


Assembly Time:
Less than 30 minutes.

This product's intended use is for carting groceries, sporting equipment, laundry items, etc.

Tools Needed: Pliers

Back Wheel Assembly

1. Slide back axle (G) through hole on back vertical tube of frame and twist axle until the second hole is visible from the bottom. Slip the axle cotter pins (H) through the bottom of the vertical tube and into the inner hole. Repeat step 1 for the other side.
2. Place a washer (C) then spring (D) another washer (C) over axle. Slip wheel (B) on the axle and place a third washer (C) in front of wheel.
3. Place hub cap (F) on the end of axle and line up the holes of the hub and the axle. Slip the cotter pin (E) through the holes. Bend end of cotter pin using pliers(not provided) to lock wheel in place. Repeat steps 2 and 3 for other side.

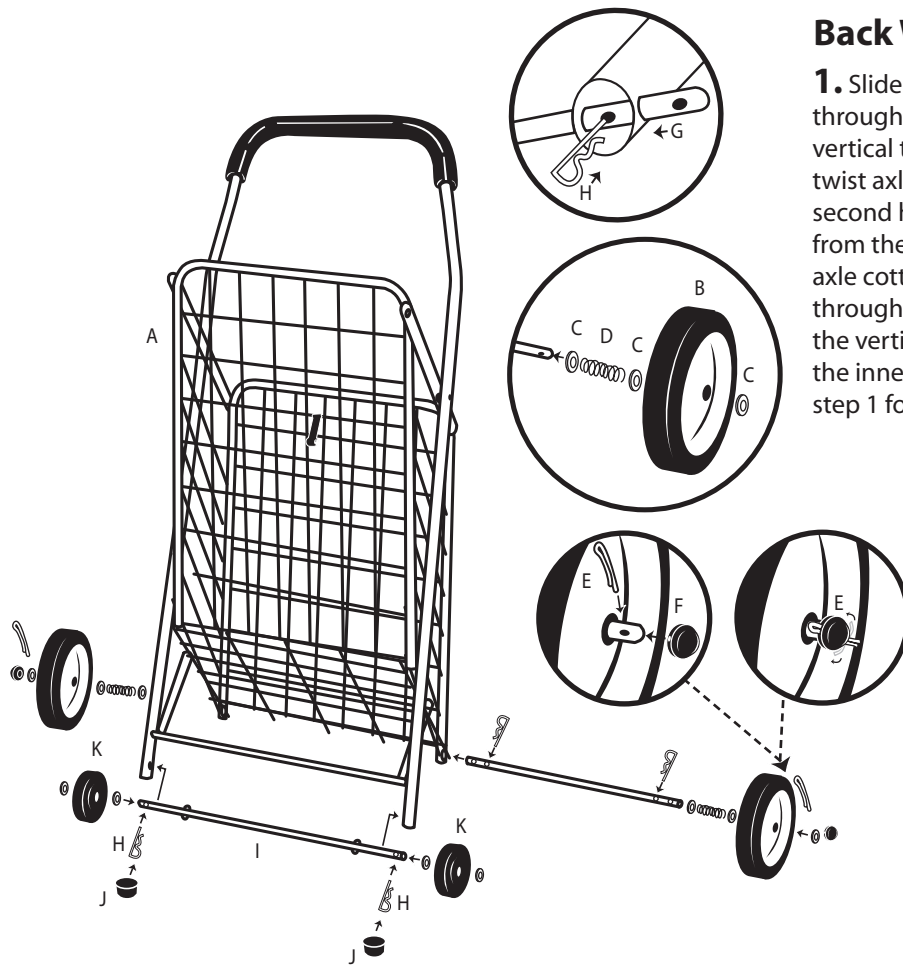

Front Wheel Assembly

Slide a washer (C) a front wheel (K) and another washer on each end of the front axle (I). Insert one side of the assembled front axle into the hole in the handle tube. Rotate the axle so the hole is visible at the bottom of the tube. Slip the cotter pin (H) into the axle hole. Repeat for the second side (aligning the hole should not be necessary on other side). Place cap (J) over ends of tube.

Part #	Reference
F6377	A
F6378	B
F6379	C
F6380	D
F6381	E
F6382	F
F6383	G
F6384	H
F6385	I
F6386	J
F6387	K
F6388	L



8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Customer Service Department, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: customer_service@whitmor.com