

6023-1306 Over The Door Shoe Rack ©2011 Whitmor




A 2 ea
Curved top bar



B 2 ea
Straight side bar



C 2 ea
Curved bottom bar



D 6 ea
Shoe support bar



E 2 ea
Mount



F 4 ea
Wall screw



G 4 ea
Vinyl cap



H 4 ea
Wall anchor

Assembly Time:
Less than 15 minutes.


This product's intended use is for storing shoes.

Tools Needed: No tools required if hanging over the door. Phillips screwdriver and drill needed if wall-mounting


NOTE:
Part "F" is for optional mounting of frame.

NOTE: Part (E) is designed for a standard interior door. If your door is thicker than this, we have brackets available to fit. Please call our customer service department for details.

Instructions for wall-mounting.

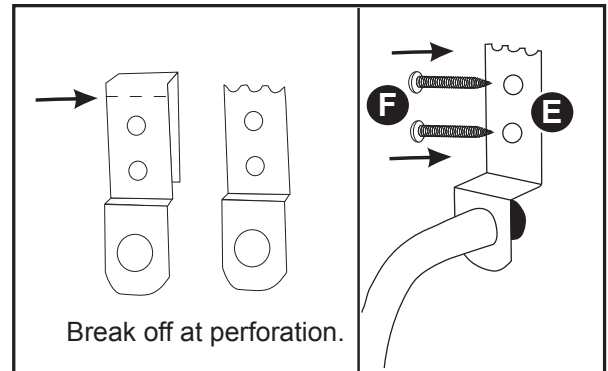

Use a drill to pre-drill holes if you are installing this shoe rack onto drywall or soft wall. Insert wall anchors (H). Use a Phillips screwdriver to tighten screws (F) into wall.

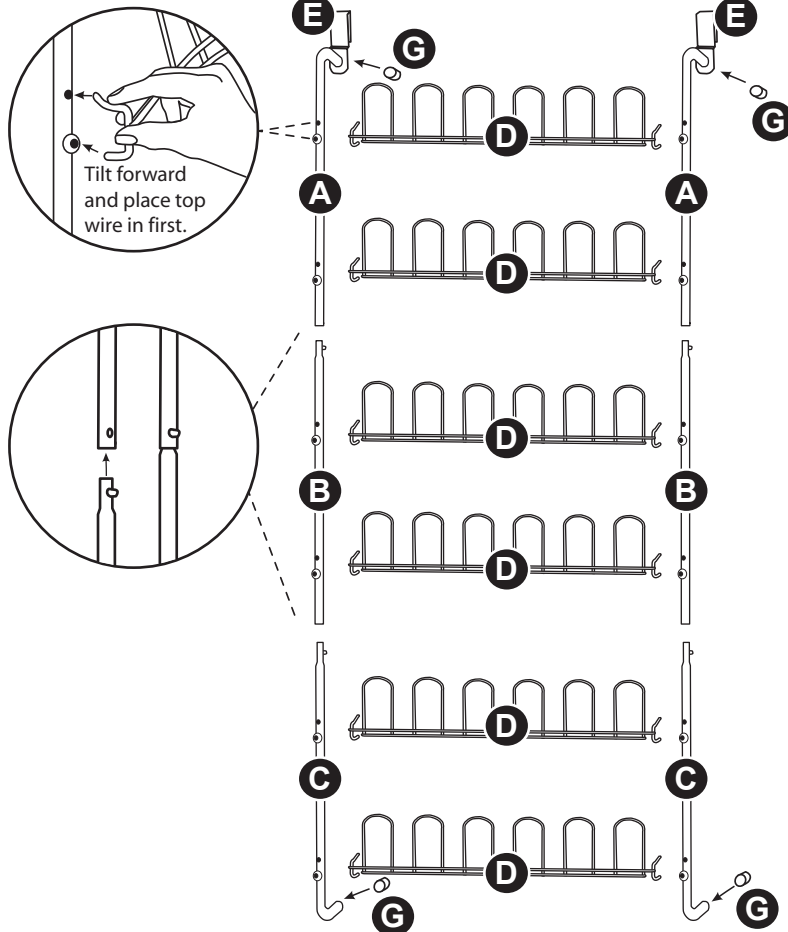

Part	Reference
A	F7247
B	F7248
C	F7249
D	F7250
E	F5822
F	F5823
G	F5824
H	F5825



8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Customer Service Department, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: customer_service@whitmor.com